 
 
 
 
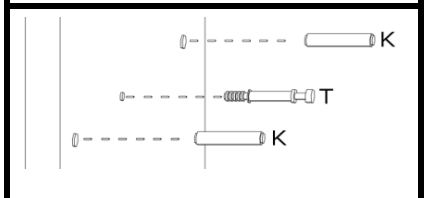 
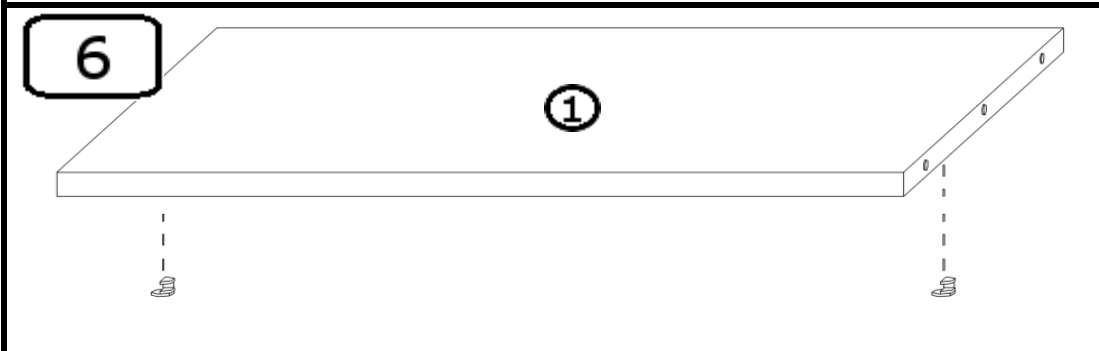 
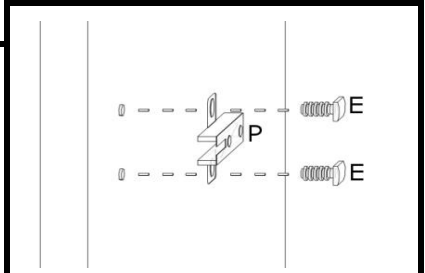 
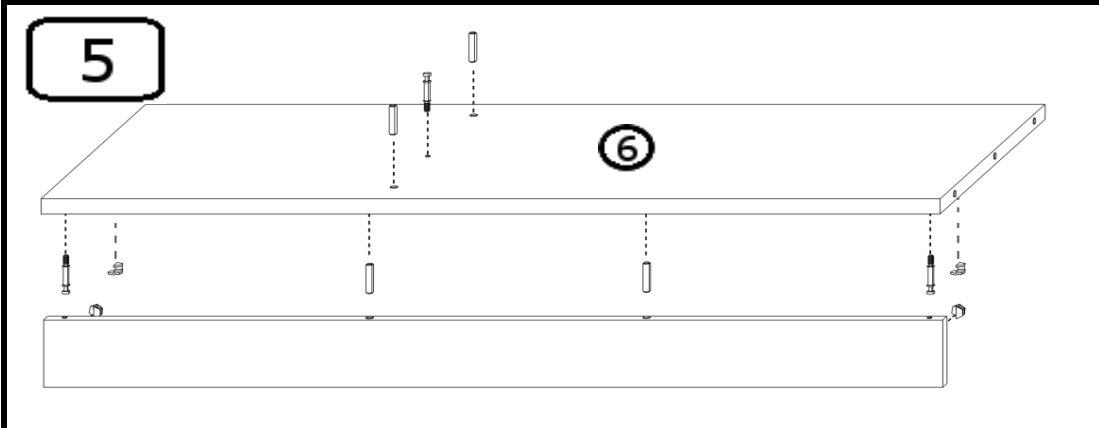 
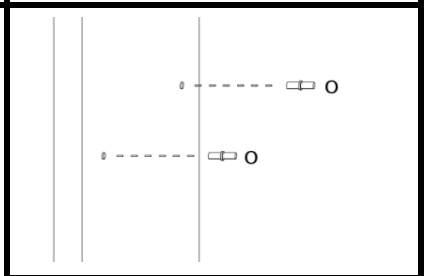 
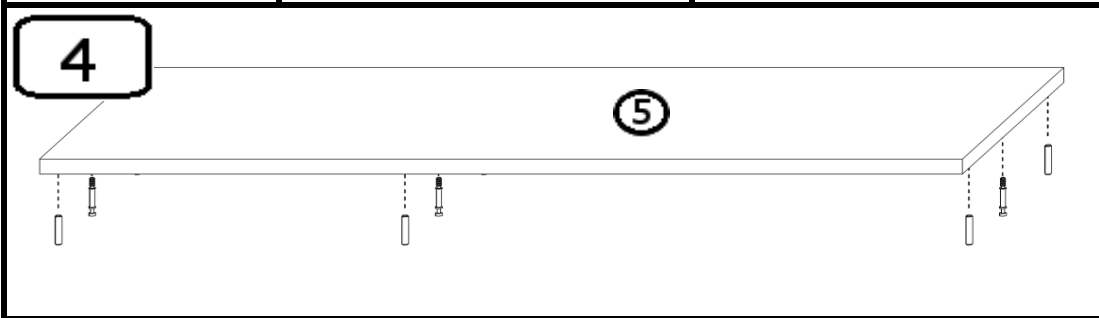 
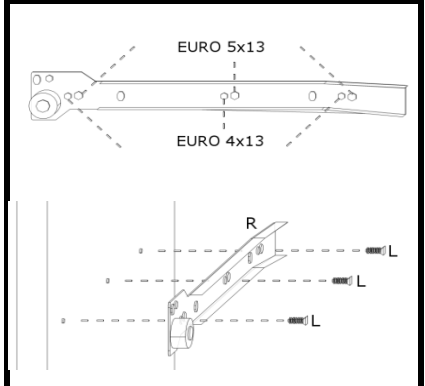 
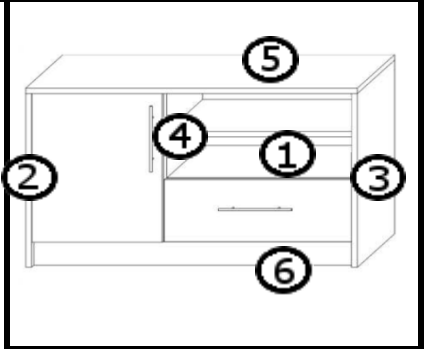 
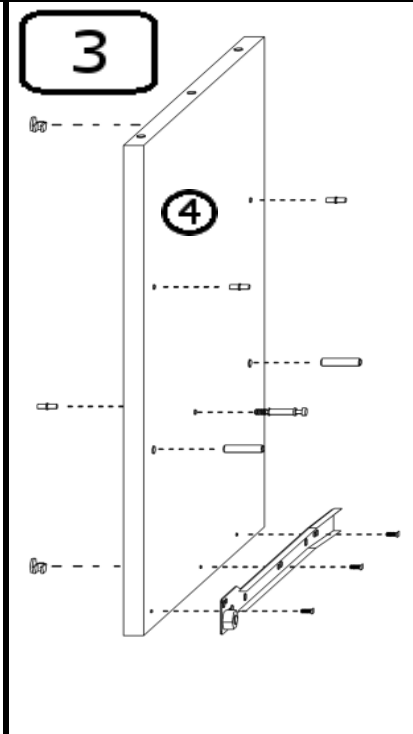 
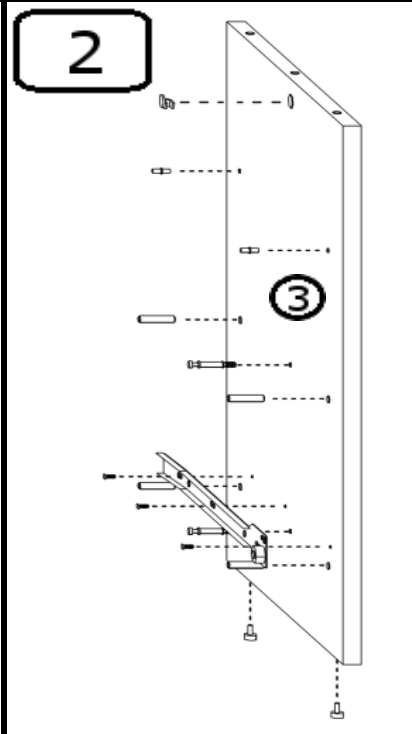 
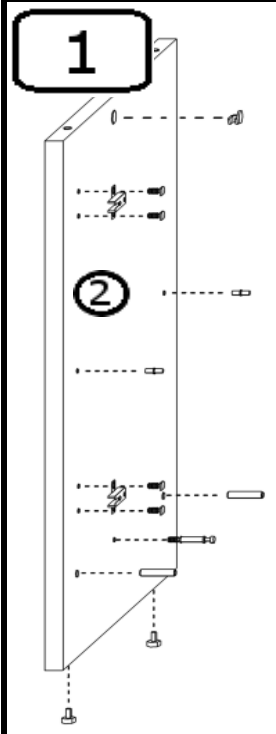 
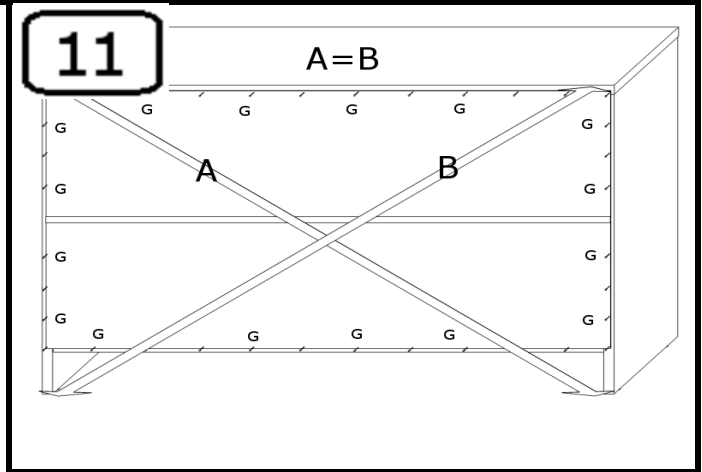 
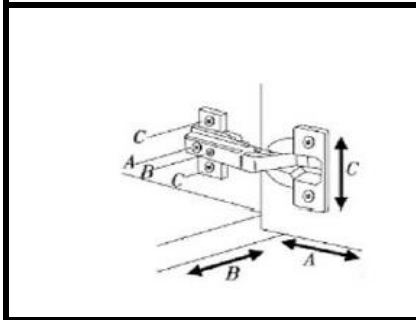 
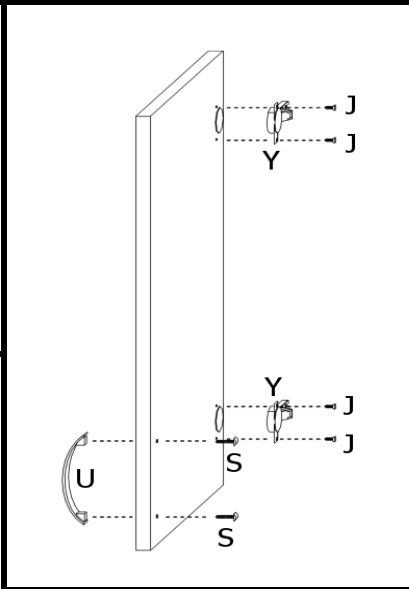 


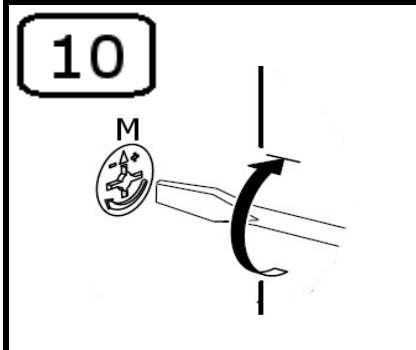

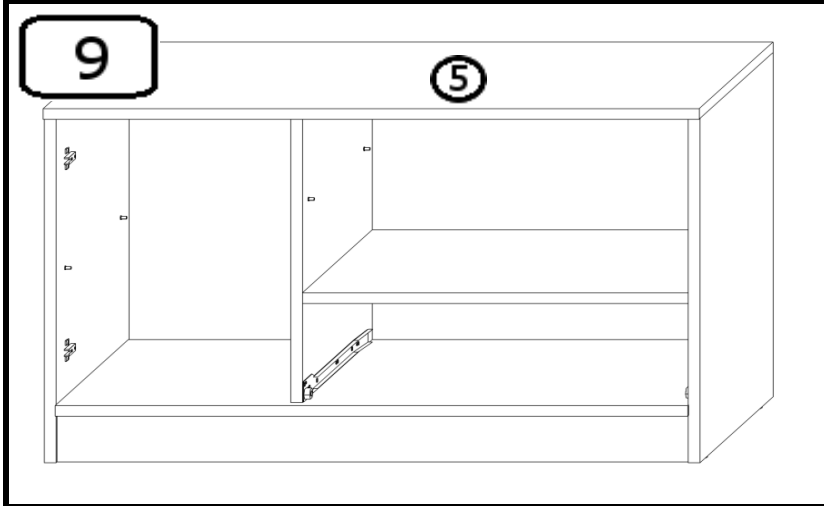

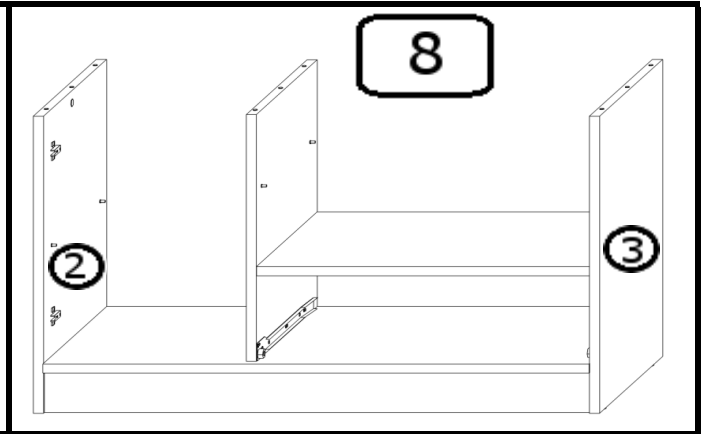


 


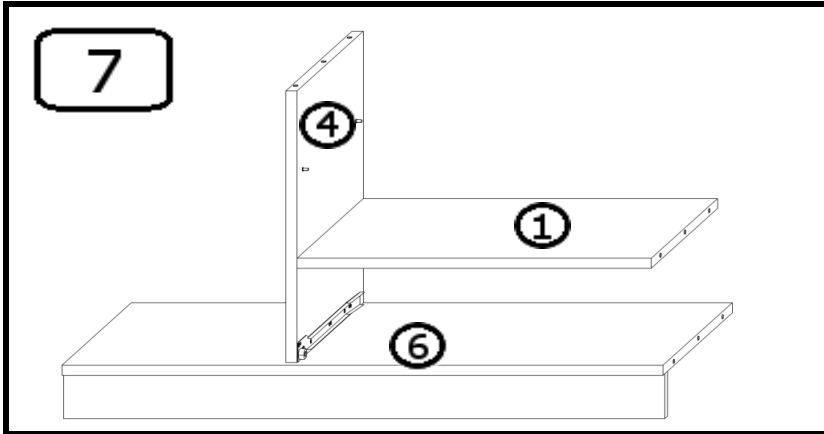


# INSTRUKCJA MONTAŻU

TV DS 100

 




AKCESORIA

G 50X 	R 1 KPL  400mm	U 2X  224mm	T 14X 	LŁ 1X 
L 8X  4x13	J 12X  4x16	S 4X 	M 14X 	
K 22X 	N 4X 	O 8X 	Y 2X  WPUSZCZANY	

1

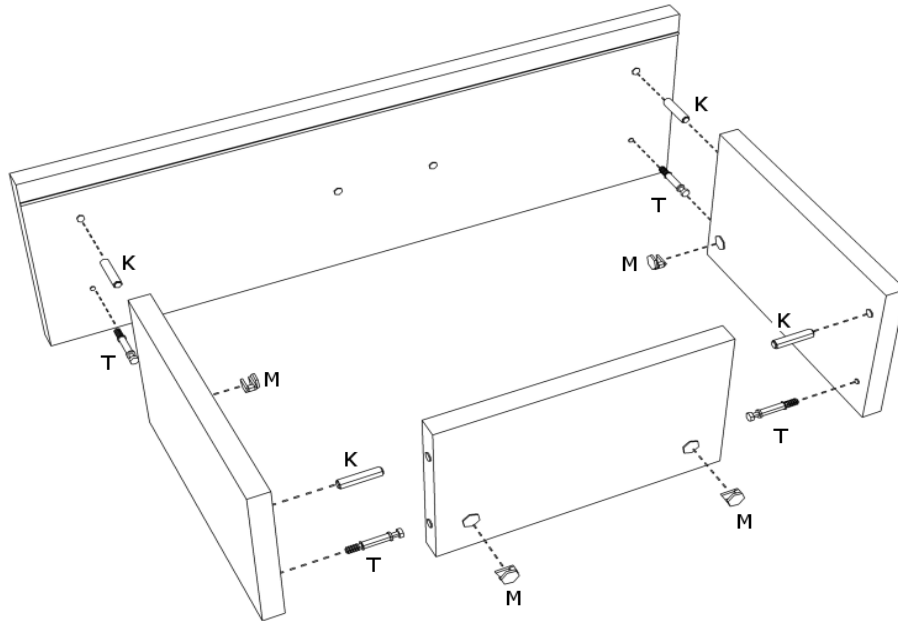

2

3

4

