


INSTRUKCJA MONTAŻU

MAJA 3D6S








1






2

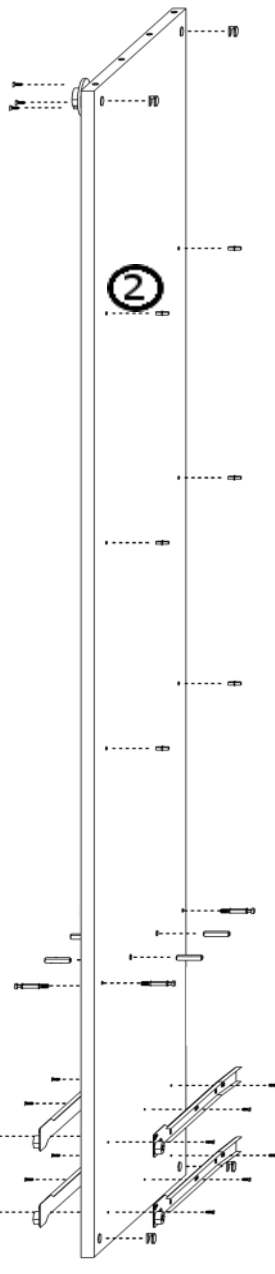


3

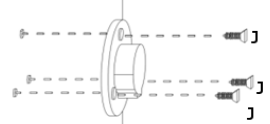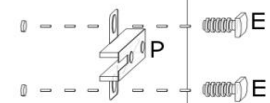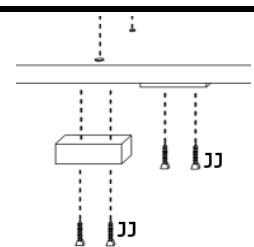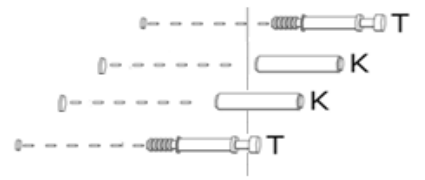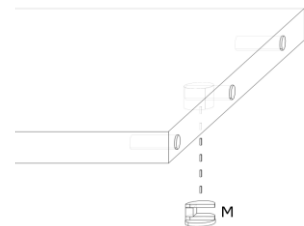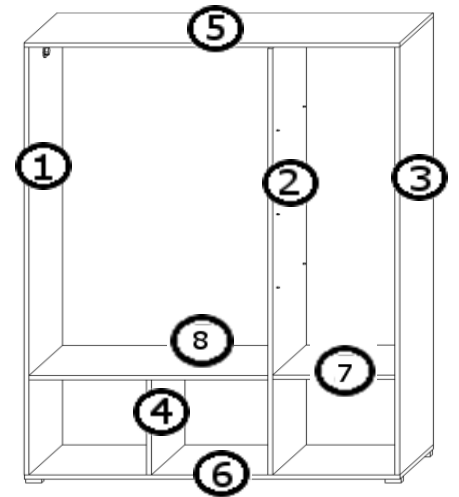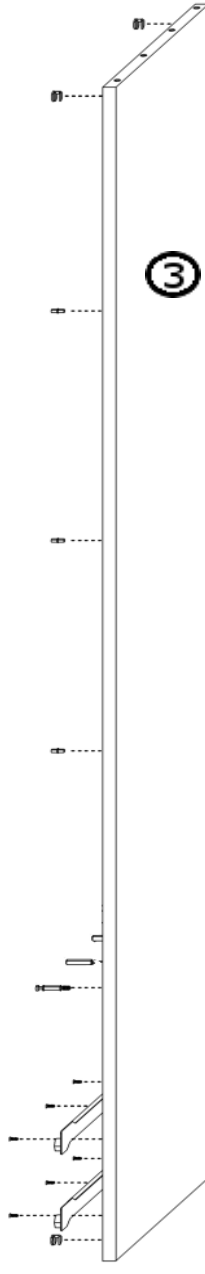


4

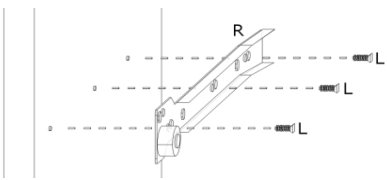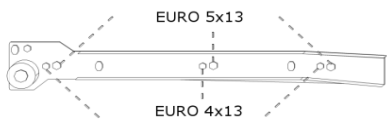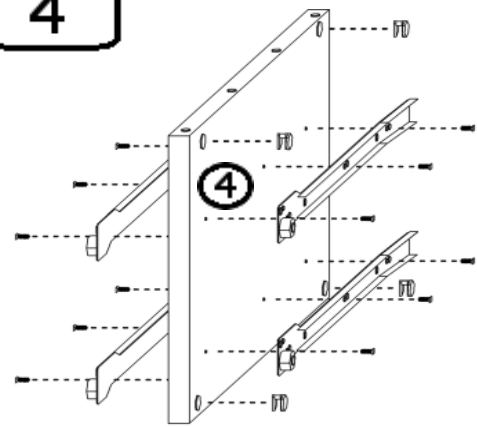


5

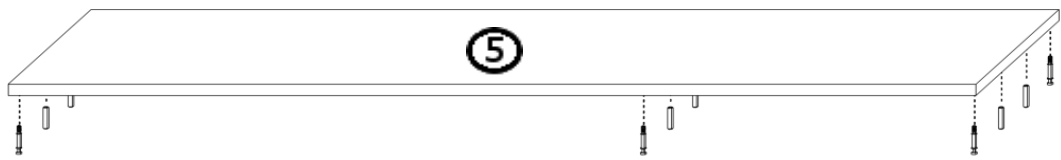


6

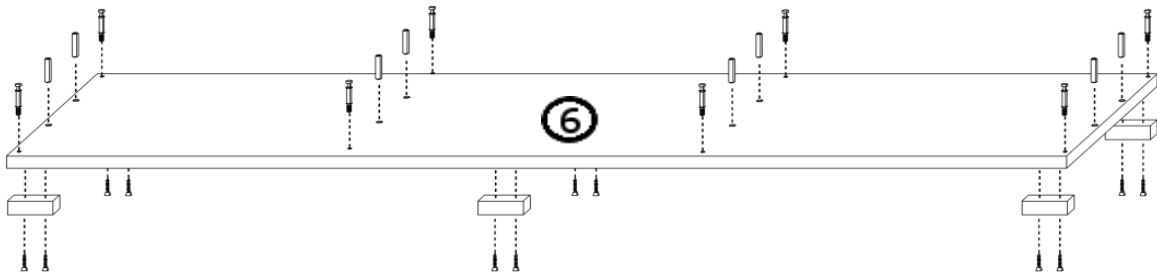


7

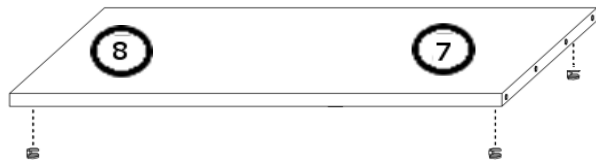


8

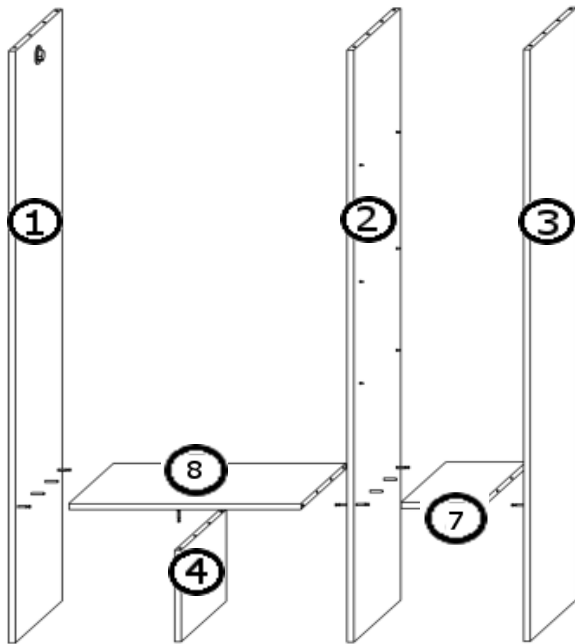



9

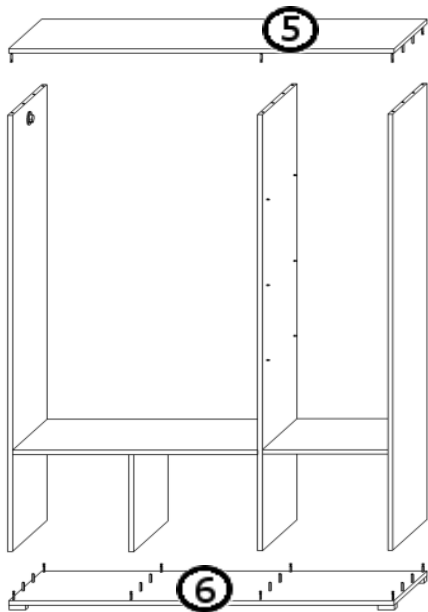




10

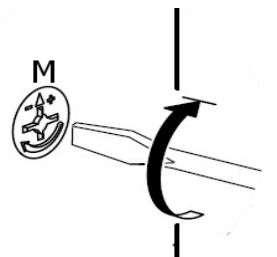

11

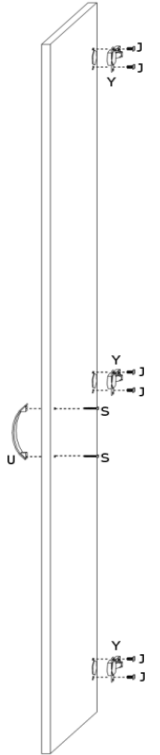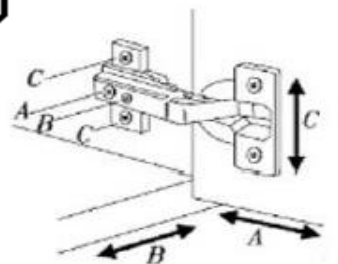

AKCESORIA				
G 100x 	R 6 KPL  450mm	U 9x  128mm	O 12X 	RD 2X 
L 48x  4x13	Y 4x  WPUSZCZANY	S 18x 	M 48x 	D 1X 
K 48x 	NP. 6x 	J 54x  4x16	T 48x 	JJ 12x  4x25
LŁ 1x 	Y 2x  POŁWPUSZCZANY			

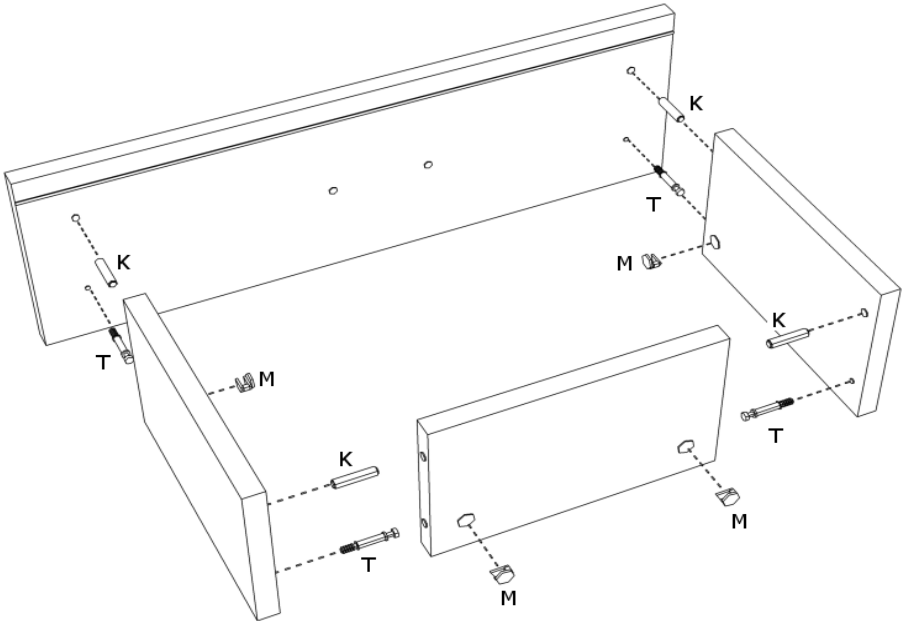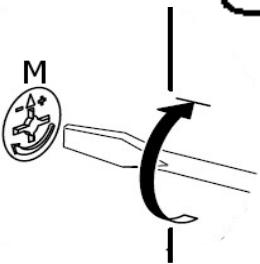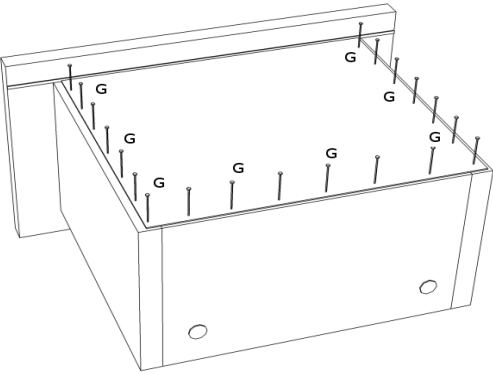INSTRUKCJA MONTAŻU		SZUFLADA
		<div>1</div>
<div>2</div> 	<div>3</div> 	<div>4</div> 